



<b>ERROR CODE</b>	<b>SYMPTON</b>	<b>FAULT</b>	<b>CAUSE</b>	<b>REMEDY</b>
<b>NE1</b>	MACHINE SWITCHED ON BUT NO POWER INDICATION	<ul style="list-style-type: none"><li>• NO POWER TO MACHINE</li><li>• NO POWER AT INDICATOR</li></ul>	<ul style="list-style-type: none"><li>• FAULTY GPO</li><li>• FAULTY INDICATOR</li><li>• FAULTY WIRING AT / OR FAULTY SELECTOR SWITCH</li></ul>	<ul style="list-style-type: none"><li>• CONTACT ELECTRICIAN</li><li>• REPLACE INDICATOR</li><li>• REPAIR WIRING OR REPLACE SELECTOR SWITCH</li></ul>
<b>NE2</b>	RINSE NOT HEATING	<ul style="list-style-type: none"><li>• BOILER ELEMENT NOT HEATING</li><li>• NO POWER TO ELEMENT</li></ul>	<ul style="list-style-type: none"><li>• ELEMENT O/C</li><li>• FAULTY OR OUT OF CALIBRATION RINSE BOILER ELEMENT THERMOSTAT</li></ul>	<ul style="list-style-type: none"><li>• REPLACE ELEMENT</li><li>• REPLACE OR RE-CALIBRATE</li></ul>
<b>NE3</b>	NOT FILLING	<ul style="list-style-type: none"><li>• NO HOT WATER</li><li>• SOLENOID VALVE NOT OPERATING</li><li>• TIMER NOT OPERATING</li></ul>	<ul style="list-style-type: none"><li>• TAP TURNED OFF</li><li>• FAULTY SOLENOID VALVE</li><li>• RINSE READY THERMOSTAT FAULTY OR OUT OF CALIBRATION</li><li>• FAULTY TIMER</li><li>• RELAY 1 FAULTY</li></ul>	<ul style="list-style-type: none"><li>• TURN TAP ON</li><li>• REPLACE</li><li>• REPLACE OR RE - CALIBRATE</li><li>• REPLACE</li><li>• REPLACE</li></ul>



<b>ERROR CODE</b>	<b>SYMPTON</b>	<b>FAULT</b>	<b>CAUSE</b>	<b>REMEDY</b>
<b>NE4</b>	WASH NOT HEATING	<ul style="list-style-type: none"><li>• ELEMENT NOT HEATING</li><li>• NO POWER AT ELEMENT</li></ul>	<ul style="list-style-type: none"><li>• O/C ELEMENT OR WIRING</li><li>• FAULTY PRESSURE SWITCH</li><li>• PRESSURE SWITCH AIR BELL OR LINE BLOCKED</li><li>• WASH ELEMENT THERMOSTAT FAULTY OR OUT OF CALIBRATION</li></ul>	<ul style="list-style-type: none"><li>• REPLACE OR REPAIR WIRING</li><li>• ADJUST OR REPLACE</li><li>• CLEAN</li><li>• REPLACE OR RE-CALIBRATE</li></ul>
<b>NE5</b>	NOT WASHING	<ul style="list-style-type: none"><li>• PUMP</li><li>• MOTOR NOT OPERATING</li><li>• BLOCKAGE IN PIPEWORK</li><li>• TIMER NOT OPERATING</li><li>• R1 OR R2 RELAY CONTACTS FAULTY</li></ul>	<ul style="list-style-type: none"><li>• BROKEN IMPELLOR</li><li>• FAULTY MOTOR</li><li>• FAULTY CAPACITOR</li><li>• FAULTY CONTACTOR</li><li>• FOREIGN MATERIAL IN PIPE</li><li>• RELAY FAULTY</li><li>• FAULTY RELAY</li></ul>	<ul style="list-style-type: none"><li>• REPLACE COMPONENT</li><li>• REPLACE MOTOR</li><li>• REPLACE</li><li>• REPLACE</li><li>• CLEAN PIPEWORK</li><li>• REPLACE</li><li>• REPLACE</li></ul>
<b>NE6</b>	NOT RINSING	<ul style="list-style-type: none"><li>• SEE NOT FILLING</li></ul>	<ul style="list-style-type: none"><li>• SEE NOT FILLING</li></ul>	<ul style="list-style-type: none"><li>• SEE NOT FILLING</li></ul>